

LAYING INSTRUCTIONS



1. Preparation

Clean the surface of all dust, grease, oil and solvent. The floor must be bare and clean.
Avoid chlorine and lemon-based cleaning products.

Note : In the presence of cracks or holes in the floor, air may penetrate under the adhesive, which may reduce the life of the product. In the presence of heavy traffic, forklifts, pallets or any other blunt object that can be pulled or pushed on the ground, we recommend the use of SESA SYSTEMS dots, corners, tees and borders.



The floor must be very dry before applying the adhesive marking: Allow the surface to dry completely and wait another approx. 30 minutes before applying the adhesives to the floor. For an optimal application of your marking on the ground, the ideal application temperature is between 18°C and 25°C

2. Adhesive application

Remove a few centimetres from the protective strip at one end: using of a cutter, draw a light line on the protective film and then slightly bend the adhesive to easily remove the film.



Place the adhesive strip or pictogram on the desired location before applying firmly. Continue the installation by applying the rest of the adhesive to the floor as you go: applying pressure with one hand, continue to remove the protective strip with the other hand.

Be careful not to overlay several markings!

In order to eliminate any air bubbles under the adhesive, we recommend rolling something heavy on your track, such as a forklift truck, for a perfect grip on the ground.



Degreasing cleaning product - Ref 140090

EXAMPLE

BEFORE




AFTER



Accessories



1

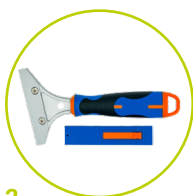

2



3



4

CODE	DESIGNATION	LEAD TIME	PACKING
140091	Starter kit for floor signage	In stock	Per unit
140092	Scraper for floor adhesive	In stock	Per unit
140090	Cleaner / degreaser, 3,785-liter / 1 gallon jerry can *	In stock	Per unit
140093	Dispenser for floor marker tape STANDARD	10 days	Per unit

* composition of the cleaning product available on our website..